


Scene setting (intermediate positions) on a Shuttle track can only be used in combination with the Forest Z-wave remote. All 3 scenes can be set in the full range between open and close.

**NOTE:** In order to make the scene setting work correctly, make sure that the curtain track is assembled in the way as shown below, to avoid changing the motor direction of the Shuttle. Also make sure the open and close limits are set.

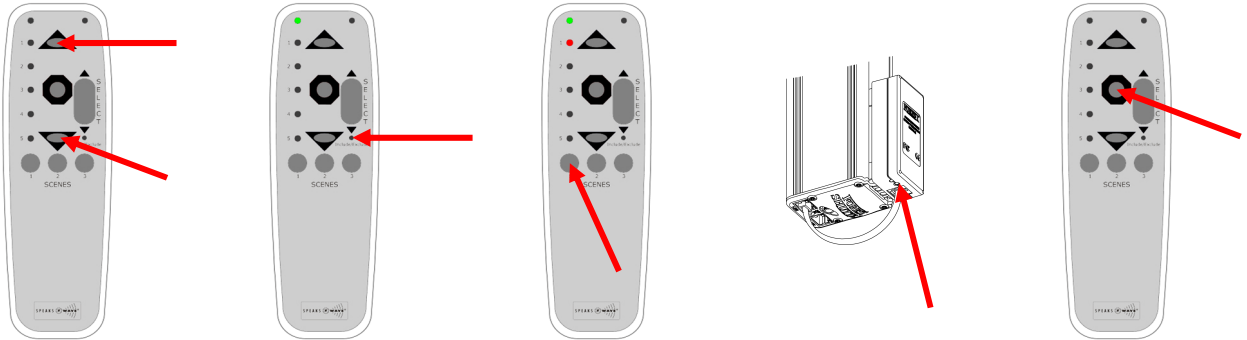

press open/close buttons to select desired position of the curtain

press include with pin, green led will light up

press the desired scene button, associated led will blink

press button on receiver

press stop button to finish

**For setting scene 2 and 3 use the same steps as above, only change scene button 2 or 3. Associated leds (2 or 3) will blink.**

### Method of assembling the toothed belt to avoid changing the motor direction of the Shuttle.

The view is like when you assemble, you look into the track. Backside of the track on the table, topview.

